











Audio Enhancement

XD Microphone Tips and Tricks

- Charge overnight with the supplied Audio Enhancement charger before first use
- Speak in a normal tone
- Plug in your microphones every night they won't overcharge
- Set the Teacher Microphone 6" away from your mouth.
- If you can hear yourself through the speakers, your volume is too high
- Teacher Microphone will turn off after being muted for 5 minutes.







.

Pairing Microphones to Your Receivers

If you power on your XD system and your microphones do not connect, follow the directions below to pair them to your receiver:

LANYARD MICROPHONE LINKING Instructions

- If microphone is ON, press and hold "PWR" until microphone turns OFF.
- 2. Press and release the XD "LINK" button on the receiver.
 3. Press and hold both "PWR" and "REC" pushbuttons together until a beep is heard

from the speaker.

HANDHELD LINKING Instructions

2 Press and release the

- 1. Slide "TALK" switch down to turn OFF the microphone.
- XD "LINK" button on the receiver.

 3. Press and hold both "PWR LINK" & "TALK" pushbuttons together

until a beep is heard

from the speaker.

OPTIONAL MEDIA MICROPHONE CHANNEL LINKING Instructions

- Turn on both paired microphones
- 2. Repeat instructions to the left for your third microphone. Pairing will take longer than usual.
- 3. The LINK LED will now function as a Media Channel power indicator.